

LM远程手机设置方法

进入下图所示 +

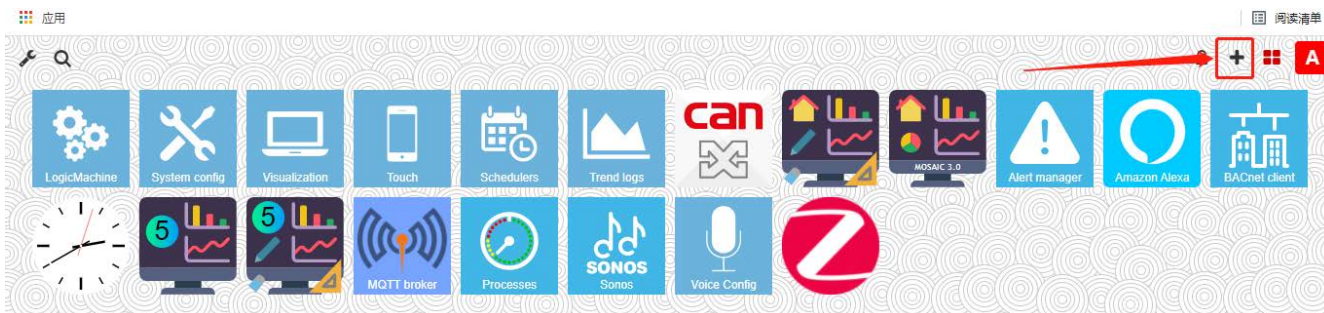


图1

选择LogicMachine Cloud(NEW)后面+添加到初始页面（如图2）

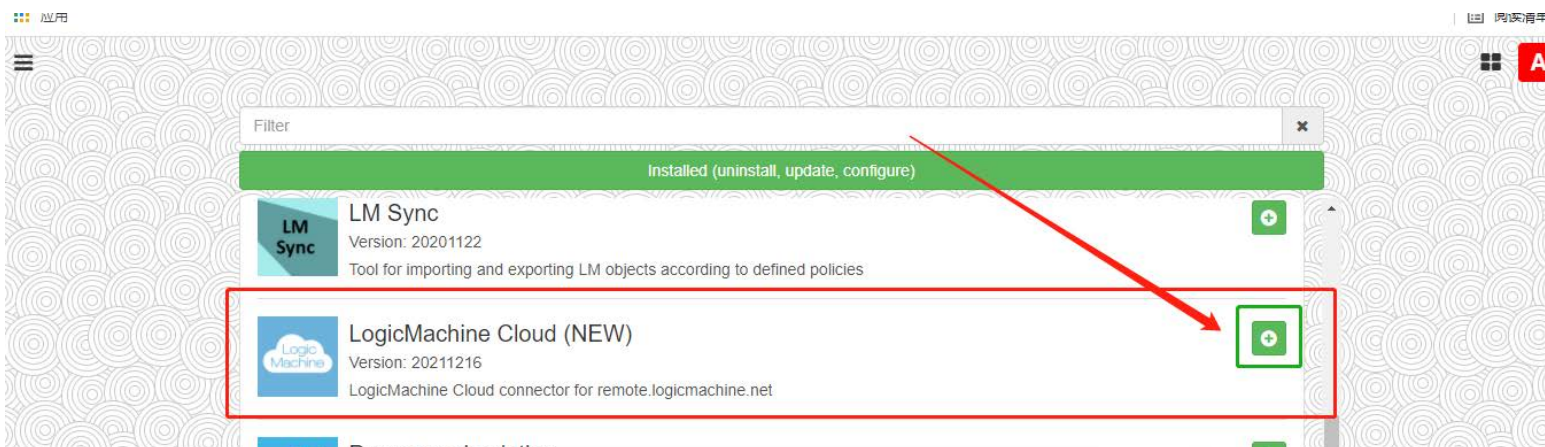


图2

LM远程手机设置方法

点击LogicMachine Cloud进入，如图3

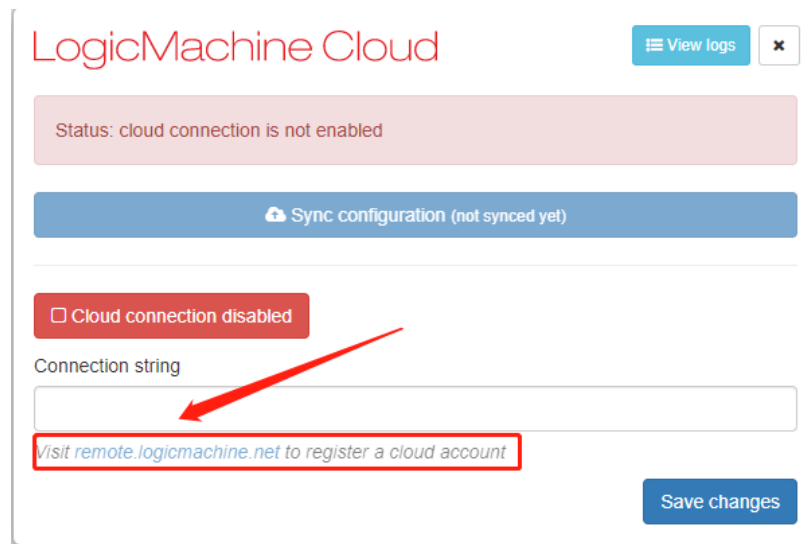
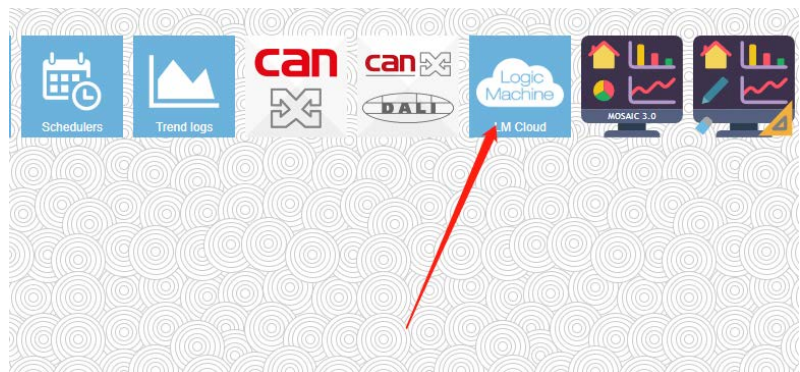


图3

根据提示注册账号密码，然后返回登录，如图4


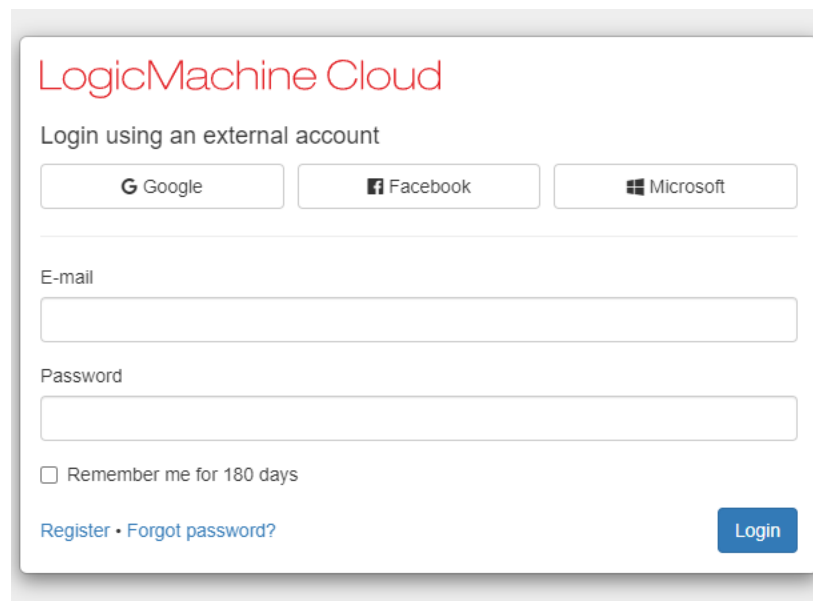


图4

LM远程手机设置方法

登录进去后如图5

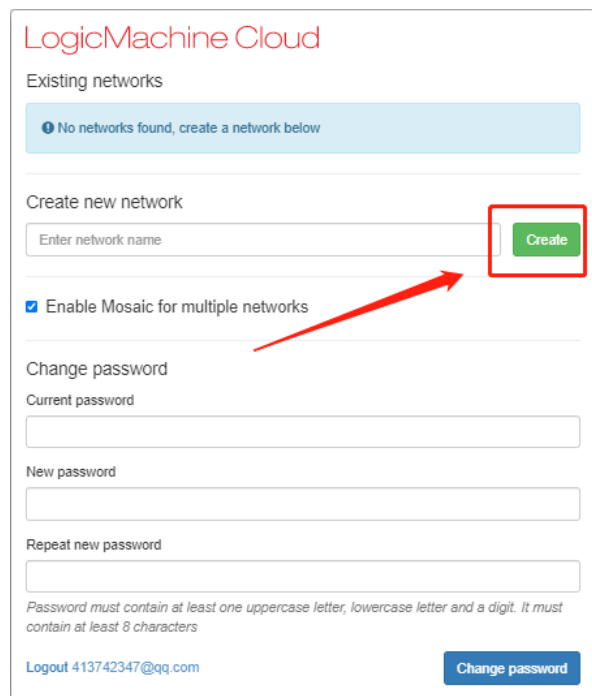

LogicMachine Cloud

Existing networks

No networks found, create a network below

Create new network

Enter network name

Enable Mosaic for multiple networks

Change password

Current password

New password


Repeat new password

Password must contain at least one uppercase letter, lowercase letter and a digit. It must contain at least 8 characters

[Logout 413742347@qq.com](#)

图5

点击**Create**，会出现一个**Existing networks ID**和连接云的连接字符串，如图6

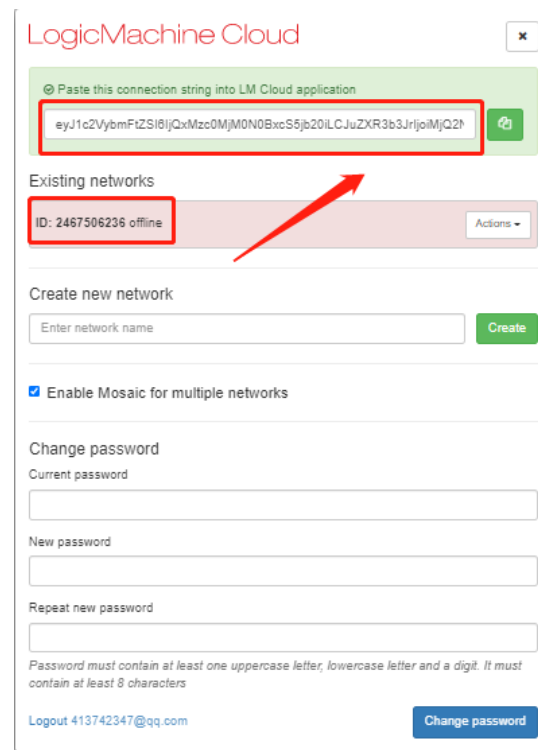

LogicMachine Cloud

Paste this connection string into LM Cloud application

eyJ1c2VybmFtZSI6IjQxMzc0MjM0N0BxcS5jb20iLCJ1c2VXR3b3JrIjoIMjQ2

Existing networks

| | |
|------------------------|---------|
| ID: 2467506236 offline | Actions |
|------------------------|---------|

Create new network

Enter network name

Enable Mosaic for multiple networks

Change password

Current password

New password

Repeat new password

Password must contain at least one uppercase letter, lowercase letter and a digit. It must contain at least 8 characters

[Logout 413742347@qq.com](#)

图6

LM远程手机设置方法

复制字符串返回LogicMachine Cloud，
把复制过来的字符串粘贴到图7处

点击**Save changes**保存，LM云就会
显示连接OK，如图8

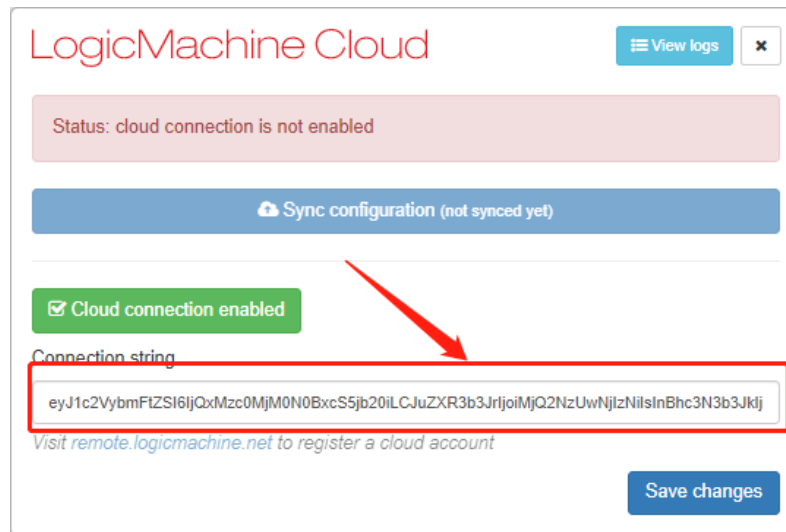


图7

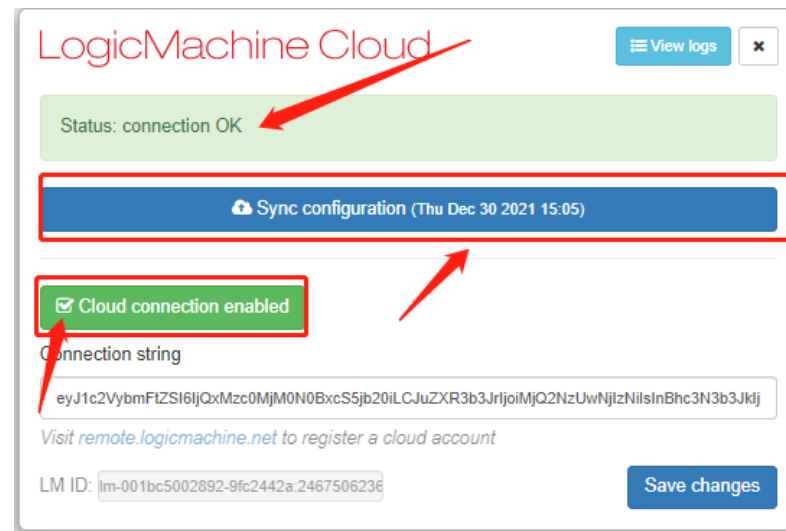


图8

LM远程手机设置方法

返回mosaic界面图2，点击就会看到手机远程APP设置成功，见图13

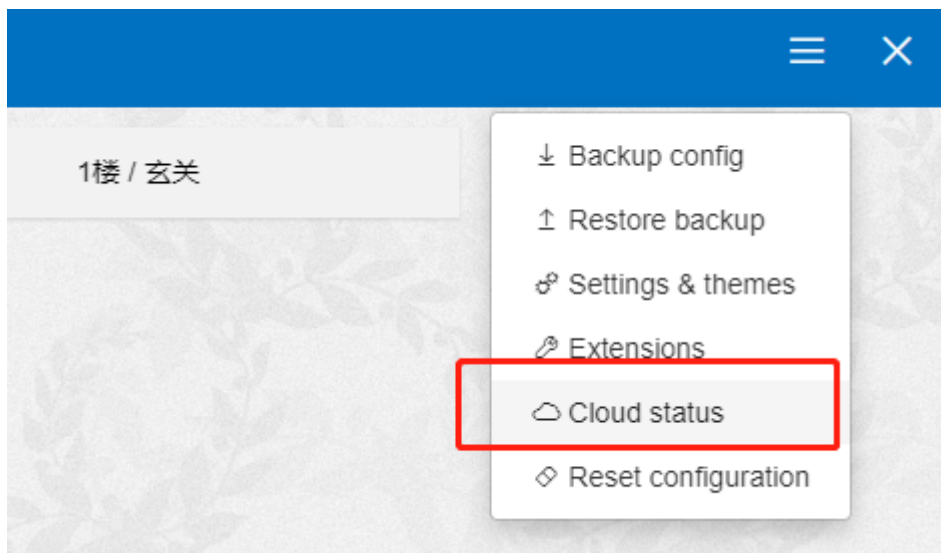


图1


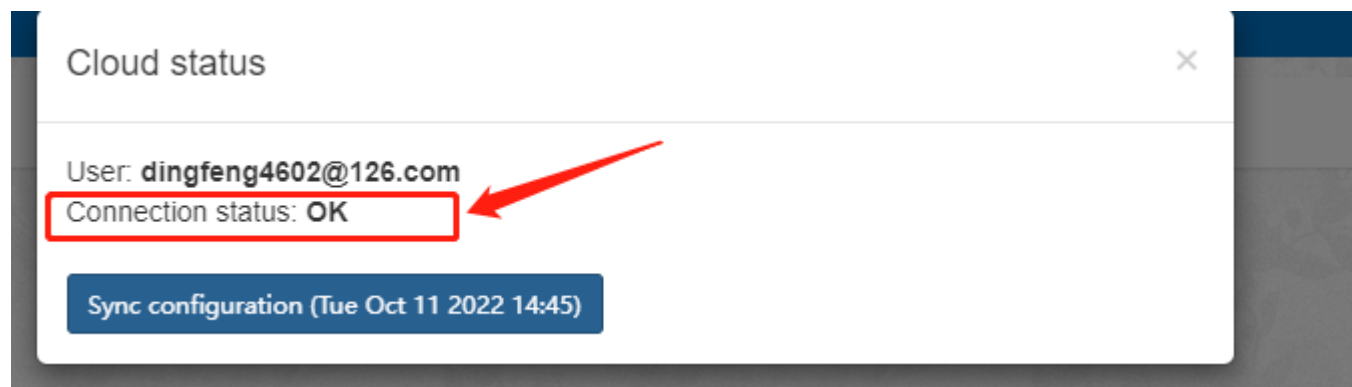



图2

LM远程手机设置方法

安卓手机登录

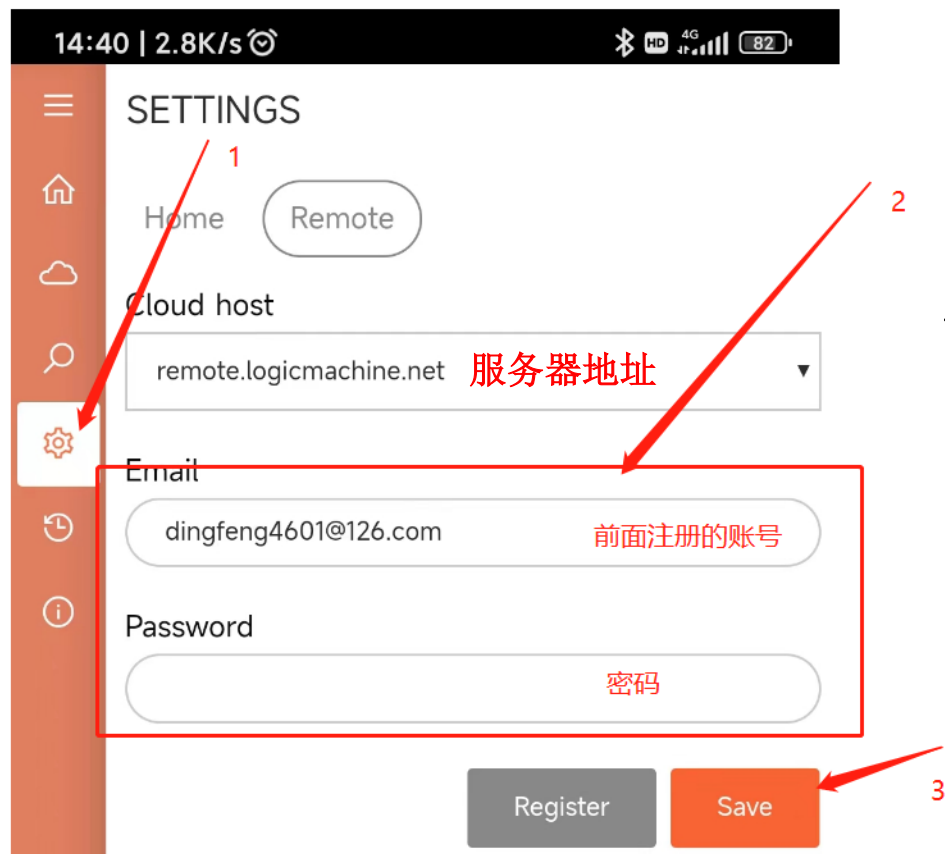

点击登录会开始加载

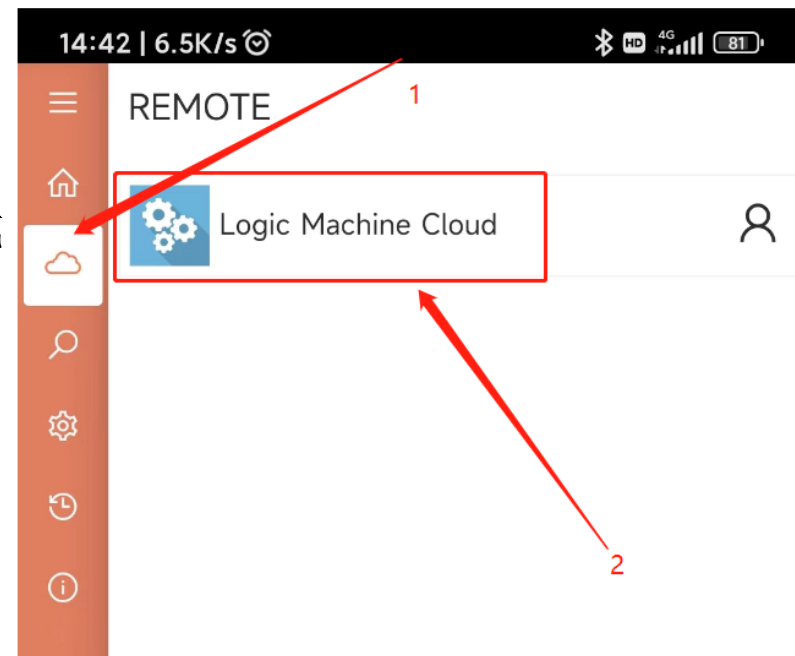

SHANGHAI

上海

City material

THANK YOU